


Point Relays

The point relay is a plugin relay (pictured previous page) and are each provided with 4PDT contacts each. This relay is internally wired and connected differently for each Model of the E1000. It is these internal connections which will determine the operating sequence for each Model. There are four (4) relays which are plugged into a Point Board Assembly and there are three (3) Point Board Assemblies utilized within each E1000 Series annunciator, thus, providing (12) points of operation. Both the relay and the point board are easily replaceable in the field. See the E1000 Series Instruction manual and the associated drawing for each model for complete details.

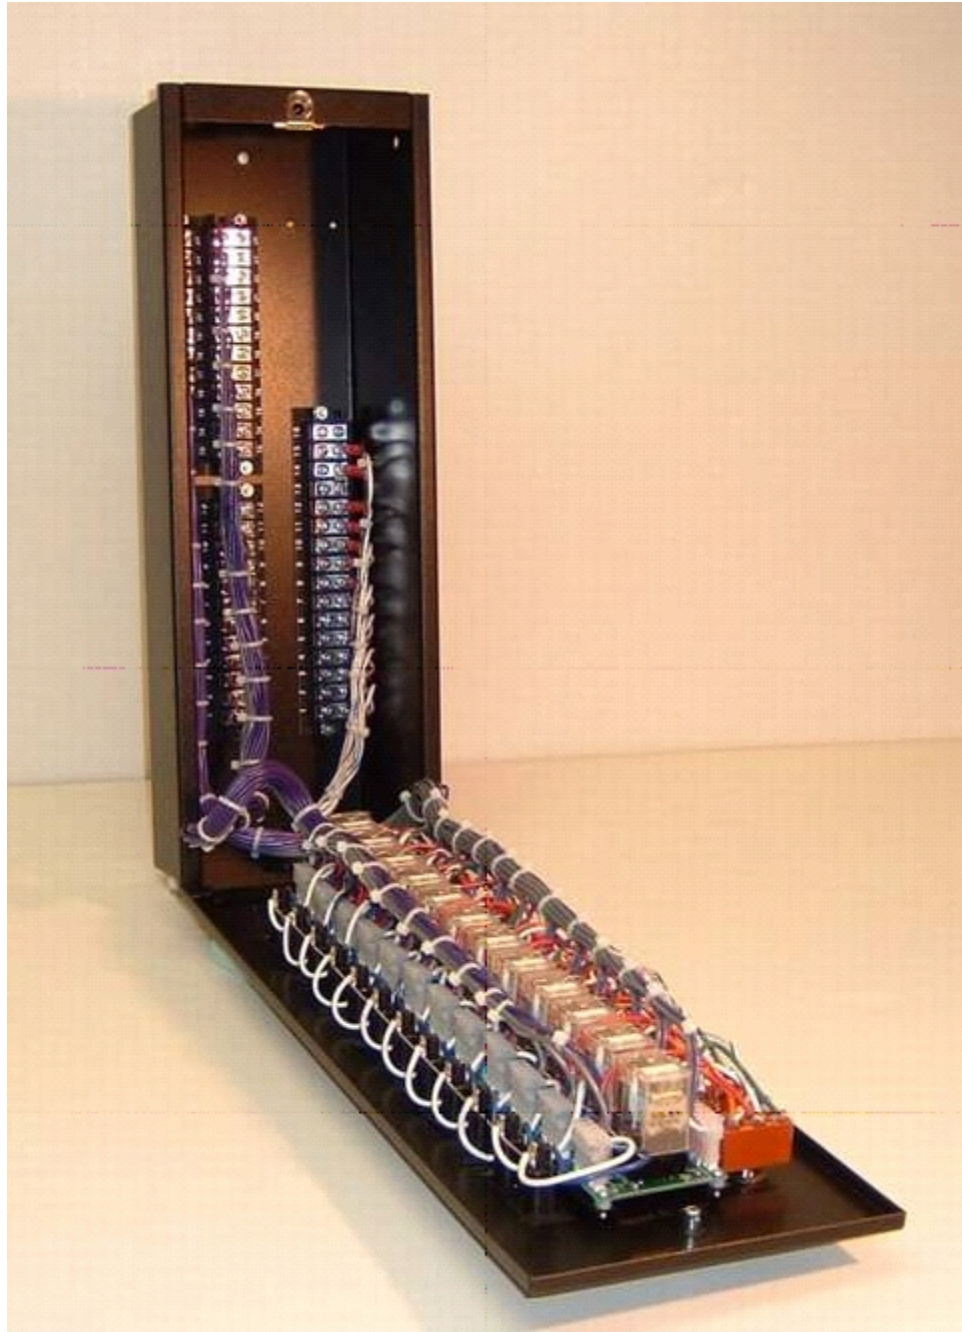

Door Open view of E1000 Series Annunciator